


IP Dongle Firmware Upgrade Guide

 **Attention**

- 1 **Before upgrading your IP dongle firmware, please :**
 - Prepare the appropriate IP Dongle firmware. Otherwise, the data communication between the IP Dongle & PDU will fail after upgrade.
 - Connect the IP Dongle to the computer directly or remotely.




How to upgrade the IP dongle firmware

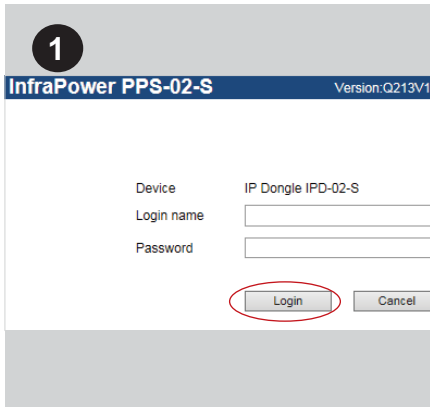


**Step 1 - Enter configured IP dongle address into the I.E. address bar
- Enter the Login name & Password and Click "Login" in the WEBUI login page**




Open the Internet Explorer (I.E.) version 9.0 or above

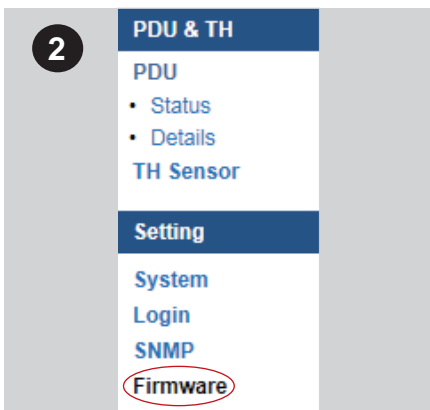


Step 2 - Select "Firmware" from the left navigation pane

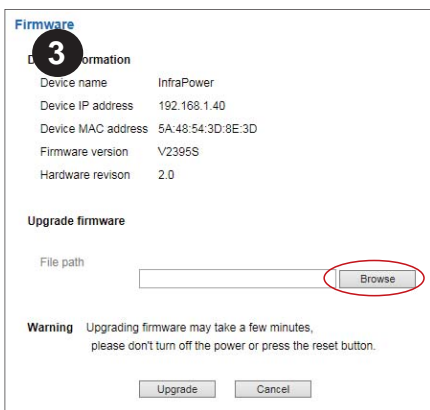

Step 3 - Click "Browse"

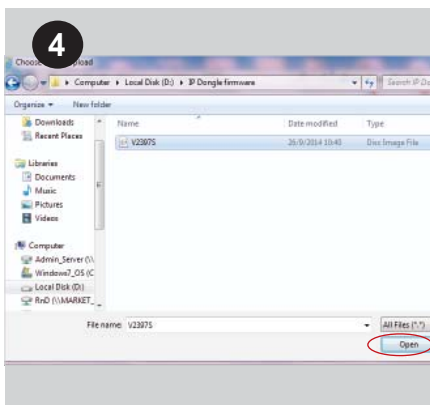

Step 4 - Select the firmware file from the file location in the pop up window and Click "Open"

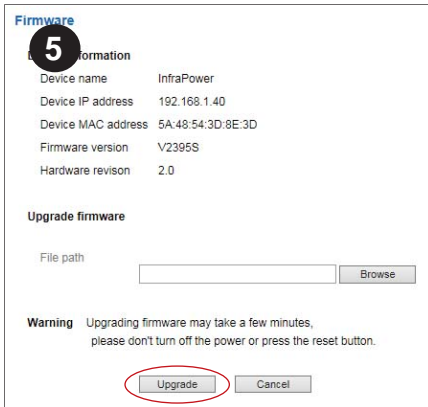

Step 5 - Click “ Upgrade “ to start the upgrade process


- It takes around 10 minutes to complete.
Once complete, the login page will appear again.



Step 6a - If you are using IPM-04 :


>> Click "Restart connection" to connect the upgraded IP dongle again

- END for Step 6a -

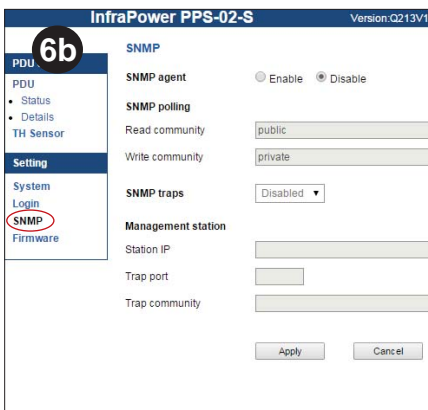

Step 6b - If you are NOT using IPM-04 :

>> Login the IP Dongle Web UI and select SNMP from the left navigation pane

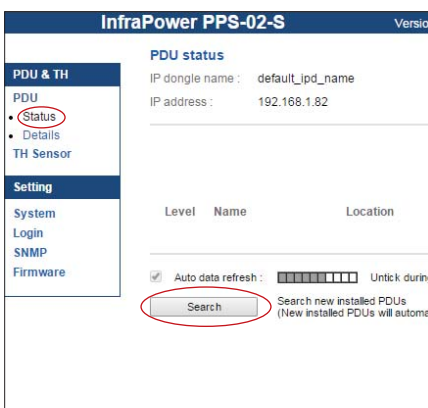

>> Select Status from the left navigation pane & click "Search" to search the connected PDU(s)

- END for Step 6b -

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2016 Austin Hughes Electronics Ltd. All rights reserved.